


ASCII stands for American Standard Code for Information Interchange. ASCII was developed a long time ago and now the characters are not always used in the same way on some machines. Below is the ASCII character table and this includes descriptions of the first 32 characters. ASCII was designed for use with teletypes and so the descriptions are somewhat obscure and their use is frequently not as intended.

ASCII Table

Dec	Hx	Oct	Char	Dec	Hx	Oct	Char	Dec	Hx	Oct	Char	Dec	Hx	Oct
0	0	000	NUL (null)	32	20	040	SPACE	64	40	100	@	96	60	140
1	1	001	SOH (start of heading)	33	21	041	!	65	41	101	A	97	61	141
2	2	002	STX (start of text)	34	22	042	"	66	42	102	B	98	62	142
3	3	003	ETX (end of text)	35	23	043	#	67	43	103	C	99	63	143
4	4	004	EOT (end of transmission)	36	24	044	\$	68	44	104	D	100	64	144
5	5	005	ENQ (enquiry)	37	25	045	%	69	45	105	E	101	65	145
6	6	006	ACK (acknowledge)	38	26	046	&	70	46	106	F	102	66	146
7	7	007	BEL (bell)	39	27	047	'	71	47	107	G	103	67	147
8	8	010	BS (backspace)	40	28	050	(72	48	110	H	104	68	150
9	9	011	TAB (horizontal tab)	41	29	051)	73	49	111	I	105	69	151
10	A	012	LF (NL line feed, new line)	42	2A	052	*	74	4A	112	J	106	6A	152
11	B	013	VT (vertical tab)	43	2B	053	+	75	4B	113	K	107	6B	153
12	C	014	FF (NP form feed, new page)	44	2C	054	,	76	4C	114	L	108	6C	154
13	D	015	CR (carriage return)	45	2D	055	-	77	4D	115	M	109	6D	155
14	E	016	SO (shift out)	46	2E	056	.	78	4E	116	N	110	6E	156
15	F	017	SI (shift in)	47	2F	057	/	79	4F	117	O	111	6F	157
16	10	020	DLE (data link escape)	48	30	060	0	80	50	120	P	112	70	160
17	11	021	DC1 (device control 1)	49	31	061	1	81	51	121	Q	113	71	161
18	12	022	DC2 (device control 2)	50	32	062	2	82	52	122	R	114	72	162
19	13	023	DC3 (device control 3)	51	33	063	3	83	53	123	S	115	73	163
20	14	024	DC4 (device control 4)	52	34	064	4	84	54	124	T	116	74	164
21	15	025	NAK (negative acknowledge)	53	35	065	5	85	55	125	U	117	75	165
22	16	026	SYN (synchronous idle)	54	36	066	6	86	56	126	V	118	76	166
23	17	027	ETB (end of trans. block)	55	37	067	7	87	57	127	W	119	77	167
24	18	030	CAN (cancel)	56	38	070	8	88	58	130	X	120	78	170
25	19	031	EM (end of medium)	57	39	071	9	89	59	131	Y	121	79	171
26	1A	032	SUB (substitute)	58	3A	072	:	90	5A	132	Z	122	7A	172
27	1B	033	ESC (escape)	59	3B	073	;	91	5B	133	[123	7B	173
28	1C	034	FS (file separator)	60	3C	074	<	92	5C	134	\	124	7C	174
29	1D	035	GS (group separator)	61	3D	075	=	93	5D	135]	125	7D	175
30	1E	036	RS (record separator)	62	3E	076	>	94	5E	136	^	126	7E	176
31	1F	037	US (unit separator)	63	3F	077	?	95	5F	137	_	127	7F	177

Extended Ascii Codes

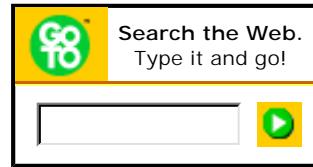

These were added later and are not true ascii.
There are different extended sets, but this is the most common.

128	Ç	144	É	160	á	176	░	193	⊥	209	╥	225	ß	241	±
129	ü	145	æ	161	í	177	░░	194	⊤	210	π	226	Γ	242	≥
130	é	146	Æ	162	ó	178	█████	195	⊠	211	✉	227	π	243	≤
131	â	147	ô	163	ú	179		196	—	212	✉	228	Σ	244	ƒ
132	ã	148	ö	164	ñ	180	+	197	+	213	F	229	σ	245	J
133	à	149	ò	165	Ñ	181	=	198	⊠	214	¶	230	μ	246	÷
134	å	150	û	166	¤	182		199		215	†	231	τ	247	≈
135	ş	151	ù	167	°	183	¶	200	✉	216	‡	232	Φ	248	°
136	ê	152	—	168	¸	184	¬	201	F	217	J	233	Θ	249	.
137	ë	153	Ö	169	—	185		202	✉	218	Γ	234	Ω	250	.
138	è	154	Ü	170	¬	186		203	╥	219	■	235	δ	251	√
139	ï	156	£	171	½	187	¶	204	⊠	220	■	236	∞	252	_
140	î	157	¥	172	¼	188	„	205	=	221	■	237	ϕ	253	²
141	ì	158	—	173	¡	189	„	206	†	222	■	238	ε	254	■
142	Ä	159	f	174	«	190	„	207	⊥	223	■	239	∞	255	
143	Å	192	L	175	»	191	¬	208	✉	224	α	240	≡		