OFDM Spectrum

Introduction

In this lab you will create an OFDM transmitter using GNU Radio Companion and an Analog Devices ADALM-Pluto SDR. You will then measure the effect of changing various parameters on the power spectrum of the OFDM signal.

Create an OFDM Transmitter

The OFDM transmitter is shown in Figure 1 and is composed of the following blocks:

- The block contains four **Variable** blocks to configure the flowgraph:
 - **samp_rate** the sample rate, initially set to 1 MHz
 - fft_len the OFDM symbol length in samples, initially 128
 - ncarrier the number of data subcarriers placed in each OFDM symbol, initially 32
 - cp_len the length of the cyclic prefix added to each OFDM symbol, initially 16
- the **GLFSR**¹ Source block generates random 0/1 values (bits). The period of the sequence is $2^{\text{Degree}} 1$. In this case the sequence will repeat after 65535 bits.

General	Advanced	Docur	nentat	ion	Ge
	ID		digita	l_gl	fsr_s
	Туре		Byte	~	^
Degree			16		
Repeat			Yes	\sim	
Mask			0		
Seed			1		

• the **Repack Bits** block groups/ungroups bits. In this case it collects two one-bit samples and creates one two-bit value (i.e. value between 0 and 3).

General	Advanced	Docun	nentation	Gene	
ID			blocks_repack_b		
Bits per input byte			1		
Bits per output byte		byte	2		
Length Tag Key		ey			
Packet Alignment		ent	Input	\sim	
Er	ndianness		LSB		

• the **Chunks to Symbols** block is configured to map 2-bit numbers into a complex value representing one of four QPSK constellation points. The array with the four possible complex values must be in Python syntax. Imaginary values are indicated with a j suffix.

General	Advanced	Docum	nentation	n G	iene	rated Co
ID			digital_c	hur	nks_t	to_symb
Input Type			Byte	\sim		
Output Type			Comple	x	\sim	
Symbol Table			[-1-1j,-1	+ 1j,	1-1j	,1+1j]
Dimension		Ч	1			
Num Ports			1			

• the **Stream to Tagged Stream** block adds a "tag" object to the sample stream. Here the tag is being used indicate the length of a group of samples that should be processed together. In this case the number of subcarriers to be placed in each OFDM symbol (ncarrier) in placed in a tag labelled packet_len.

General	Advanced	Docur	nentation	Generate	
ID			blocks_stream_to_ta		
Туре			Complex	\sim	
Vector Length		1			
Packet Length		:h	ncarrier		
Length Tag Key		"packet_len"			

• the **Throttle** block reduces the real-time sampling rate. Since there is no actual sink or source to set the sampling rate, the flowgraph will process samples as quickly as it can. This uses up all of the CPU time and makes the computer unresponsive. A typical PC should be able to compute at a sample rate of 10 k samples per second as configured in the flow graph in Figure 1.

¹Galois linear feedback shift register

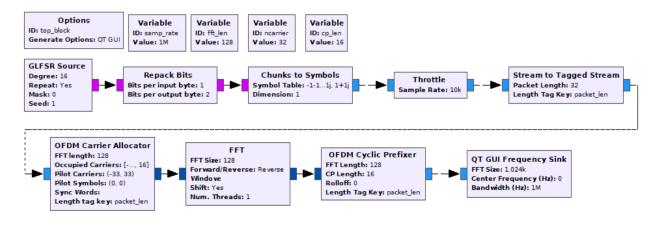


Figure 1: GRC flowgraph for an OFDM transmitter.

• the OFDM Carrier Allocator block places the data and pilot values into the correct subcarriers locations in an array of fft_len values (with zeros elsewhere). The data values are placed on the subcarriers nearest the carrier but not on the carrier frequency itself (index 0).


Pilots subcarriers are not needed since we are not implementing a receiver. However, the block does not work properly without them so zero-value pilots are added on either side of the data subcarriers.

General Advanced Docu	mentation Generated Code
ID	digital_ofdm_carrier_allocator_cvc_0
FFT length	fft_len
Occupied Carriers	[range(-ncarrier/2,0)+range(1,ncarrier/2+1)]
Pilot Carriers	((-(ncarrier+1),(ncarrier+1)),)
Pilot Symbols	((0,0,),)
Sync Words	0
Length tag key	"packet_len"

 the FFT block performs in inverse FFT on fft_len frequency-domain values (the complex subcarrier values) samples to generate fft_len complex time-domain samples

General	Advanced	Docun	nentation	Genera
	ID		fft_vxx_0	
l li	nput Type		Complex	\sim
FFT Size			fft_len	
Forward/Revers		se	Reverse	\sim
Window				
	Shift		Yes 🗸	
Nu	m. Threads	5	1	

 the OFDM Cyclic Prefix block adds a cyclic prefix of cp_len samples to each OFDM symbol



 the Pluto SDR Sink block represents the software that configures and writes samples to the SDR. The SDR's RF output is connected to the spectrum analyzer so you can measure the power spectrum of the OFDM signal.

If the Pluto SDR sink block is not available, follow the instructions at: https://tcom.bcit.ca/ under the link "how to Add Pluto SDR Support" and click on the Reload Blocks () button.


• a Frequency Sink block that displays the baseband spectrum of the signal. The only change from default settings is the Y-axis range:

<u>ID</u>	qtgui_freq_sink_x_0
Туре	Complex 🗸
Name	un .
FFT Size	1024
Window Type	Blackman-harris 🗸
Center Frequency (Hz)	0
Bandwidth (Hz)	samp_rate
Grid	No 🗸
Autoscale	No 🗸
Average	None 🗸
<u>Y min</u>	-60
<u>Y max</u>	10
Y label	Relative Gain
Y units	dB
Number of Inputs	1
Update Period	0.10
GUI Hint	
Show Msg Ports	No 🗸

Measure the Power Spectrum

Connect the Pluto SDR's USB port (the one marked with the USB symbol) to a USB port on the PC. Connect the TX output of the Pluto SDR to the RF input of a spectrum analyzer using the supplied SMA-to-BNC cable:

Run the flowgraph. Ignore warnings about missing xterm or broken libusb. This flowgraph has no GUI widgets so you will just see a blank window while it is running. You will see the spectrum of the OFDM signal:

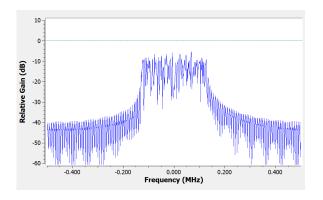

Change Parameters

Create a table with the following columns:

- sample rate,
- sample period,
- samples per OFDM symbol,
- OFDM symbol period,
- subcarrier spacing,
- number of subcarriers, and
- bandwidth.

Calculate the expected values for subcarrier spacing and bandwidth for the default parameters (above) and the following three additional test conditions (make the following changes relative to the first measurement rather than cumulative):

- change fft_len from 128 to 256
- change ncarrier from 32 to 64
- change samp_rate from 1 MHz to 2 MHz
- change the spectrum analyzer span from 500 kHz to 5 MHz

Change each of the parameters and observe the effect on the spectrum. Capture the spectrum in each case. By the end of the lab you should have a screen capture of your flowgraph and five spectrum analyzer eapture four frequency sink files for your report.

Lab Report

Your lab report, in addition to the usual identification information, should contain:

- a screen capture of your Gnu Radio Companion flow graph
- the spectrum analyzer frequency sink screen captures for the five four conditions listed above
- brief explanations of the shape of the initial spectrum and how each change affected the observed spectrum.