


RS-232 Serial Interface Waveform

Introduction

In this lab you will generate an asynchronous serial (“RS-232”) waveform that transmits your name to the serial port (“UART”) on the lab PC.

A diagram of the equipment setup in the lab is shown below. The waveform is generated by the Arbitrary Waveform Generator (AWG) from samples loaded into it from a CSV file. The AWG output is connected to a PC serial port (UART) on the back of the PC through a cable. A “breakout board” allows test equipment to connect to the signals on the serial interface. A “terminal emulator” program running on the PC displays the characters received over the serial port and this confirms that you created a valid RS-232 signal.

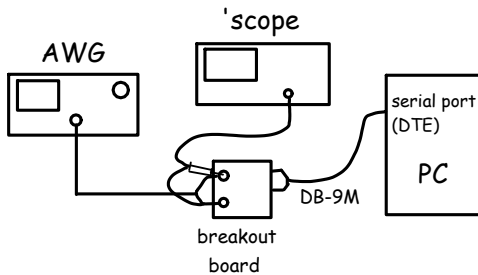

Software

You will use the following software to complete this lab:

- Octave: the same numerical analysis software used in previous labs. Your commands will generate samples of an RS-232 waveform and save them to a CSV file that can be loaded into the AWG using the supplied Python script.
- TeraTerm: an application called a “terminal emulator”. This application displays ASCII- or UTF-8 encoded characters received on the PC’s serial port. You will use it to verify that you’ve generated the correct waveform.

This software is freely available.

Generate the Waveform

The waveform you created in the previous lab generated a 7-bit asynchronous serial interface (“RS-232”) waveform. In this lab you will create a longer waveform that encodes the characters of your name.

In this lab we will again use Octave commands operating on vectors and matrices to generate the waveform.

In the Matlab language a string (a sequence of characters) is stored as a row vector containing the ASCII values of the characters in the string. The commands below convert this string to an asynchronous serial interface waveform.

```
% load the communications package to access the
% de2bi() (decimal to binary) function

pkg load communications

% define the string, a vector of character values,
% to transmit including a carriage return and line
% feed

s="Hello, world!\r\n"

% convert to a matrix with 8 bits per character in
% each row and one row per character; the bits are
% in lsb-first order

b=de2bi(s,8)

% for convenience set 'n' to the number of rows:

n=size(b,1)

% we add start (0) and stop (1) bits before and
% after the data bits in each row (character):

c=[zeros(n,1),b,ones(n,1)]

% indexing a matrix with ':' yields a column
% vector containing all the elements in
% column-wise order. To read the values row-wise
% we transpose the matrix with the transpose
% operator (''), read the values column-wise and
% transpose back to a row vector:

c=c'(:)

% add a 10-bit gap in the waveform to allow the
% UART to synchronize quickly
```

```

c=[c,ones(1,10)]

% with all the bits in a row, the conversion to
% normalized voltages is as in the previous lab:

% replicate the rows to get 10 samples per bit:

s=repmat(c,10,1)

% convert 0 to +1 and 1 to -1:

v=1-2*s

% and write these values to a CSV file:


csvwrite('samples.csv',v(:))

```

Procedure

Generate and Check the CSV File


Use Octave to generate a CSV file containing the waveform required to transmit your name as an asynchronous serial signal. As in the previous lab, use the `plot(v(:), 'x-')` command to generate a plot of your waveform. An example is:

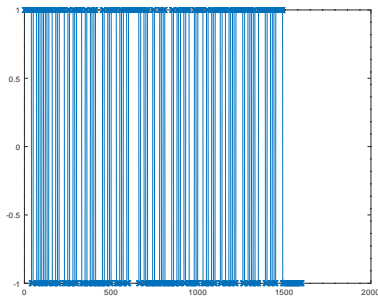

Check the waveform at this point to make sure at least the start and end polarity are correct and you have approximately the right number of samples (number of characters \times number of bits per character \times number of samples per bit). Use File > Save to save it to a format that you can include in your report (e.g. .png).

Generate and the Check Waveform


As in the previous lab, the instructor will have connected the AWG channel 1 output and the 'scope channel 1 input. These will also be connected to lab PC's RS-232 serial port using a "breakout board" as shown below:

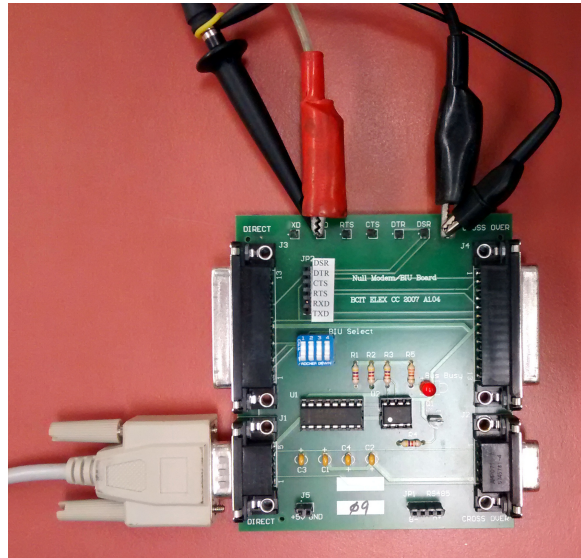

PC serial ports are wired as DTEs so the connection is made to the RxD pin.

Run the "Ultra Scope" utility as in the previous lab to view the AWG output on the 'scope and verify a signal is being generated by the AWG.

Run the `awgLoad.py` script:

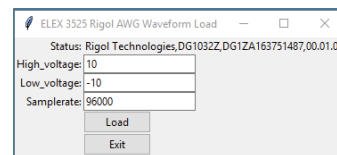


and enter the required high and low voltage levels (at least ± 5 V). The sample rate should be set so that the serial interface bit rate is set to a value determined by the last digit of your BCIT ID:

Last digit of your ID	bit rate (Hz)
0,1,4,7	4800
2,5,8	9600
3,6,9	19200


You will need to calculate the AWG sample rate based on the number of bits per sample that you used when generating the waveform.

Click on the Load button and choose the CSV file to load into the AWG. You should now see the waveform on the 'scope.

Adjust the 'scope vertical and horizontal scales so that you can see at least one period of the waveform. Remember to change the probe scaling to 10X. Stop the 'scope. The display should look similar to:

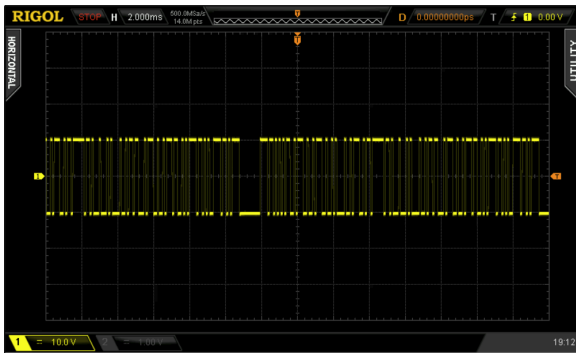


Run the `scopebusdecode.py` script:

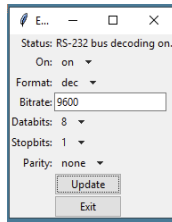

and configure the bus decoding parameters (for your waveform. The bit rate should be set according to the specifications above. Use the `ascii` format display for this lab. Press `Update` to configure the 'scope to decode the RS-232 signal.

Right-click on the screen and select `Print Instrument Screen` to capture what is shown on the 'scope's actual display. It will look similar to:

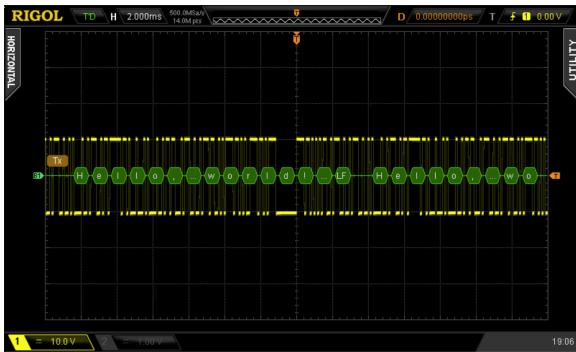


Verify that the decoded string matches your name. Take a screen capture of this display for your report.

Display Characters


Run Teraterm. Select serial port input using `COM1` when the program starts. Select `Setup->Serial Port` and set the `COM1` settings for the correct baud rate, number of data bits, parity, and stop bits¹. Set flow

¹Hint: Do this step carefully. A significant number of students mis-configure the software and then waste time tracking down non-existent problems elsewhere.

control to none.

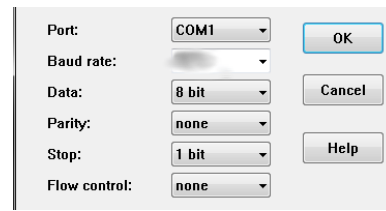

If you've done everything correctly you should now see your name displayed repeatedly on the terminal:

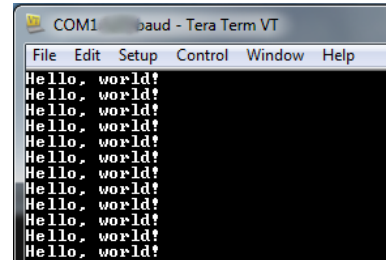

Save a copy of the screen capture showing the Teraterm output, and a screen capture of the 'scope display showing the initial portion of the decoded serial waveform.

Lab Report

Create a report in PDF format containing:

- the required identification information (your name, etc.),
- the waveform as plotted by Octave,
- a screen capture of the waveform displayed by the 'scope (without decoding),
- the 'scope display with decoding showing your decoded name (or a portion of it),
- a screen capture showing the Teraterm window with your name displayed.

Submit your lab report using the appropriate Assignment folder on the course web site.